

MODULAR

DROPOUTS & CONVERSION KITS



⌀ × ⌀ **MK III**

THREE INSERT OPTIONS



Our Fairlight x Bentley Mk III dropouts are a fully modular design with removable CNC inserts on the disc-side and the drive-side. These dropouts feature on the **Strael 4.0, Secan 3.0 and Faran 3.0**.

The benefit of the design is that we do not have to align ourselves to any particular brand or standard. The hope is that as new standards are developed in the future (it's inevitable I'm afraid!), we can produce inserts to meet the dimensional requirements of those new designs. The aim is that we can future-proof your investment.

We offer three different drive-side insert options; **Standard hanger, Direct Mount and SRAM Full Mount**.

In this guide sheet we will look at the compatibility for each of the insert types.



DROPOUT INSERT OPTIONS

STANDARD HANGER

 ×  MK III

This is the standard derailleur hanger.

This insert is compatible with **ALL rear derailleurs except SRAM Full Mount.**



DIRECT MOUNT



This insert can be used with any Direct Mount compatible rear derailleurs. Compatible rear derailleurs include:

SHIMANO:

- **105:** R7000 11-speed, R7100 12-speed.
- **105 Di2:** R7150 12-speed.
- **Ultegra:** R8000 11-speed.
- **Ultegra Di2:** R8050 11-speed, R8150 12-speed.
- **Dura Ace:** R9100 11-speed.
- **Dura Ace Di2:** R9150 11-speed, R9250 12-speed.
- **GRX:** RX810 2x 11-speed, RX812 1x 11-speed, RX820 2x 12-speed.
- **GRX Di2:** RX815 2x 11-speed, RX817 1x 11-speed, RX825 2x 12-speed.

Note: Shimano GRX 1x 12-speed (Mechanical or Di2) does not use the Direct Mount standard.



SRAM FULL MOUNT



This insert is compatible with all SRAM Full Mount derailleurs.

Note: The insert is NOT compatible with a SRAM UDH hanger. It is designed specifically for the direct fitment of SRAM Full Mount derailleurs only.

Compatible rear derailleurs include:

SRAM Gravel:

- Rival XPLR AXS 1x 13-speed.
- Force XPLR AXS 1x 13-speed.
- Red XPLR AXS 1x 13-speed.

SRAM MTB:

- All Eagle Transmission derailleurs.

Note: Whilst the Eagle 70 and Eagle 90 mechanical Full Mount derailleurs will fit to the frame, they are currently not compatible with our Mk III dropout system because the Full Mount option does not include the necessary cable stop.



MODULAR CABLE STOP



Only for use with the Standard hanger and Direct Mount inserts. NOT compatible with the SRAM Full Mount insert.

For the Mk III we have introduced a particularly elegant new feature into the driveside dropout; a CNC'd removable cable stop.

It makes a big difference to the specificity of each build type and it means that whether you are running mechanical, Di2 or AXS gearing, the frame looks like it was designed specifically for it.

The cable stop has a specific washer plate that it is paired with. The stop features a small, machined pin that locates in the hole in the plate. Di2/AXS set-ups use an alternative washer plate that features a logo rather than a hole.

Note: If swapping from mechanical to electric/wireless gearing, or vice-versa, the plates can be swapped and they are included in the respective **CONVERSION KITS**. See later in this document for the conversion kit guide.



STANDARD HANGER

Di2/AXS/Wireless groupset configuration.



DIRECT MOUNT

Di2/AXS/Wireless groupset configuration.



STANDARD HANGER

Mechanical groupset configuration.



DIRECT MOUNT

Mechanical groupset configuration.



REPLACING OR SWAPPING INSERTS

TWO BOLT DESIGN



All of the dropout inserts attach using 2 x T30 M6 bolts.

The Standard Hanger and Direct Mount inserts mount to the inside of the frame. The hangers themselves have two threaded holes to accept the bolts. The bolts mount from the outside and the stainless washer (and stopper if using) protect the frame from the bolt heads.

The SRAM Full Mount insert attaches to the outside of the frame. A threaded steel plate attached to the inside of the frame which the bolt the M6 bolts screw into.

The parts are straightforward to replace and/or interchange.

Over the next pages we look at **two worked examples** to act as a guide.

Example 1 - swapping between a Standard Hanger insert and a Direct Mount insert.

Example 2 - swapping between a Standard Hanger and a SRAM Full Mount insert.



EXAMPLE 1: SWAPPING THE STANDARD HANGER INSERT FOR A DIRECT MOUNT INSERT.

If you are a confident home mechanic then you can do this yourself. Alternatively this will be a straight-forward job for a good local bike shop.

To do the insert swap, first remove the wheel from your bike. The whole process shown here can be done without removing the chain or loosening the derailleur cable.



1 - Use a 5mm allen key to remove your Shimano Direct Mount compatible derailleur from the standard hanger.

2 - Use the same allen key to then remove the bracket axle (knuckle) from the derailleur.



3 - The bracket axle can be stored away somewhere, you do not need it for the rest of the installation. Keep the bolt close to hand as you will need it again to install the derailleur to the Direct Mount insert.

4 - Use a T30 allen key to remove the bolts from the standard hanger.

Note: T25 bolts are pictured in the worked example but for production we use T30 bolts as standard for all inserts.





5 - Completely remove the standard hanger insert from the frame. Put the bolts and stainless washer on a nearby surface as you'll need them again shortly.

6 - Take the Direct Mount hanger and insert the male mating parts into the dropout holes.






7 - Add the stainless washer and the bolts again that were removed in step 4. **Tighten the bolts to 8 Nm.**

8 - Slide the derailleur on to the Direct Mount insert and add the bolt that was removed in step 2. **Tighten the bolt to 8-10 Nm.**

You can then re-install the wheel and try the gears. You should not need to re-adjust the limit screws but you will need to adjust the B-screw.

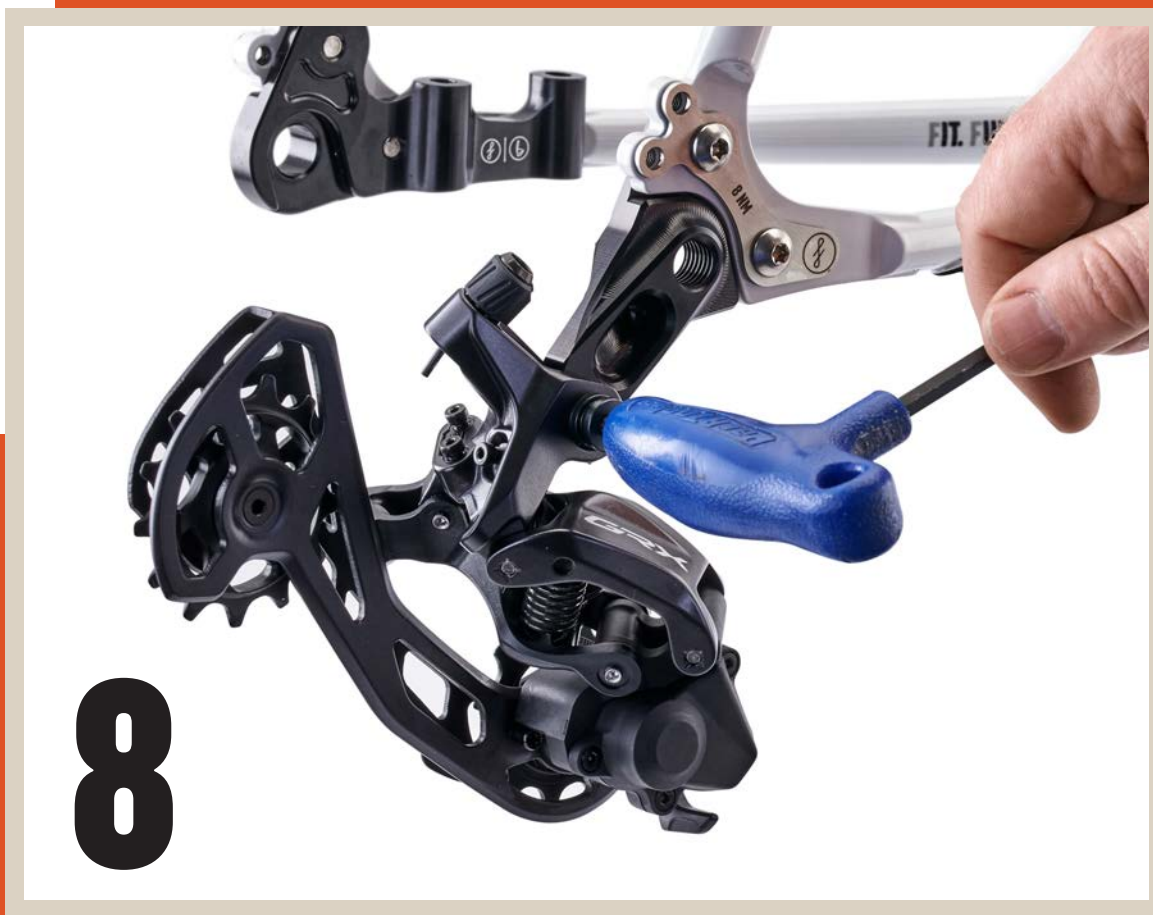



EXAMPLE 2: SWAPPING THE STANDARD HANGER INSERT FOR A SRAM FULL MOUNT INSERT.

If you are installing a SRAM Full Mount insert then you will be installing an all-new gearing system. Please read the SRAM instructions carefully. If you are unsure, consult a qualified workshop.



1 - Use a T30 allen key to remove the bolts from the standard hanger.

Note: T25 bolts are pictured in the worked example but for production we use T30 bolts as standard for all inserts.

2 - Completely remove the standard hanger insert from the frame. Put the insert, stainless plate and bolts into a small bag and store them away.



3 & 4 - Unlike the other inserts, the Full Mount insert fits to the outside face of the dropout. The bolts screw into a stainless threaded plate which is mounted to the inside face. The male mating parts of both pieces should fit snugly into the holes in the dropout face.





5 - Add the T30 12mm bolts and **torque both bolts to 8 Nm.**

Important note: You must use the bolts supplied with the Full Mount insert. They are a different length to the bolts used for the other inserts.

6 - Install the SRAM plastic top-hat washer/bushing that is supplied as part of the Full Mount derailleur.





7 - Slide the Full Mount derailleur on to the insert.

8 - Add the bolt and very lightly tighten. Do NOT torque the bolt at this stage.

From this stage onwards please follow the SRAM installation instructions that are supplied with the Full Mount derailleur. Make sure you use the axle that is supplied as part of the Full Mount insert kit.



CONVERSION KITS:

STRAEL 4.0

SECAN 3.0 & FARAN 3.0

MECHANICAL CONVERSION KITS

**CONVERTING MECHANICAL GEARING TO:
SHIMANO DI2 12-SPEED
SRAM AXS 12-SPEED
SRAM FULL MOUNT AXS 13-SPEED**

NOTE: EXCEPT FOR SRAM FULL MOUNT AXS 13-SPEED KITS, THESE KITS DO NOT INCLUDE A HANGER. IF A DIFFERENT HANGER IS REQUIRED, THE RELEVANT LINKS ARE BELOW.

Hanger compatability is listed earlier in the document.




Purchase a Standard Hanger Insert [here](#)



Purchase a Direct Mount Insert [here](#)

MECHANICAL TO SHIMANO DI2 12-SPEED

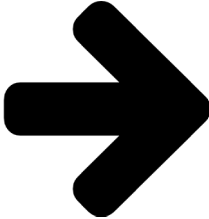

MECHANICAL TO SHIMANO DI2 12-SPEED - STRAEL 4.0

The kit contains the following:

- 1 x Mk III washer plate - Di2/AXS/EPS
- 2 x T30 M6x11mm bolts - to install washer plate.
- 1 x MK3 BB Guide Di2/AXS/EPS - Road
- 1 x T25 M5x6mm bolt + M5 reduced diameter washer - to install BB Guide.
- 1 x Mk III CNC Downtube guide - 1 way
- 1 x M5x14mm bolt + MK5 reduced diameter washer - to install downtube guide.
- Shimano Di2 Grommet EW-SD300 6mm - for seat tube Di2 hole / front derailleur wire.
- Shimano Di2 Grommet EW-SD300 7x8mm - for chainstay Di2 hole / rear derailleur wire.



PURCHASE THIS KIT

Price: £15 -UK, £12.50 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout Mechanical Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT MECHANICAL DRIVETRAIN CONVERSION KITS

£15.00 - £70.00

A conversion kit for riders currently using a mechanical drivetrain who want to convert to a new drivetrain type.

Converting to

Shimano Di2 Wireless

Bike Model

Strael 4.0

Clear

£15.00

1 **Add to basket**

MECHANICAL TO SHIMANO DI2 12-SPEED - SECAN 3.0 & FARAN 3.0

The kit contains the following:

- 1 x Mk III washer plate - Di2/AXS/EPS
- 2 x T30 M6x11mm bolts - to install washer plate.
- 1 x MK3 BB Guide Di2/AXS/EPS - Gravel
- 1 x T25 M5x6mm bolt + M5 reduced diameter washer - to install BB Guide.
- 1 x Mk III CNC Downtube guide - 1 way
- 1 x M5x14mm bolt + MK5 reduced diameter washer - to install downtube guide.
- Shimano Di2 Grommet EW-SD300 6mm - for seat tube Di2 hole / front derailleur wire.
- Shimano Di2 Grommet EW-SD300 7x8mm - for chainstay Di2 hole / rear derailleur wire.



PURCHASE THIS KIT

Price: £15 -UK, £12.50 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout Mechanical Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT MECHANICAL DRIVETRAIN CONVERSION KITS

£15.00 - £70.00

A conversion kit for riders currently using a mechanical drivetrain who want to convert to a new drivetrain type.

Converting to

Shimano Di2 Wireless

Bike Model

Secan 3.0 or Faran 3.0


Clear

£15.00

1

Add to basket

MECHANICAL TO SRAM AXS 12-SPEED

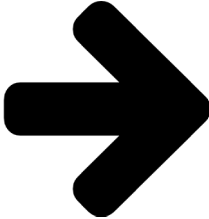

MECHANICAL TO SRAM AXS 12-SPEED - STRAEL 4.0

The kit contains the following:

- 1 x Mk III washer plate - Di2/AXS/EPS
- 2 x T30 M6x11mm bolts - to install washer plate.
- 1 x MK3 BB Guide Di2/AXS/EPS - Road
- 1 x T25 M5x6mm bolt + M5 reduced diameter washer - to install BB Guide.
- 1 x Mk III CNC Downtube guide - 1 way
- 1 x M5x14mm bolt + MK5 reduced diameter washer - to install downtube guide.



PURCHASE THIS KIT

Price: £15 -UK, £12.50 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout Mechanical Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT MECHANICAL DRIVETRAIN CONVERSION KITS

£15.00 - £70.00

A conversion kit for riders currently using a mechanical drivetrain who want to convert to a new drivetrain type.

Converting to

SRAM AXS Wireless

Bike Model

Strael 4.0

Clear

£15.00

1

Add to basket

MECHANICAL TO SRAM AXS 12-SPEED - SECAN 3.0 & FARAN 3.0

The kit contains the following:

- 1 x Mk III washer plate - Di2/AXS/EPS
- 2 x T30 M6x11mm bolts - to install washer plate.
- 1 x MK3 BB Guide Di2/AXS/EPS - Gravel
- 1 x T25 M5x6mm bolt + M5 reduced diameter washer - to install BB Guide.
- 1 x Mk III CNC Downtube guide - 1 way
- 1 x M5x14mm bolt + MK5 reduced diameter washer - to install downtube guide.



PURCHASE THIS KIT

Price: £15 -UK, £12.50 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout Mechanical Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT MECHANICAL DRIVETRAIN CONVERSION KITS

£15.00 - £70.00

A conversion kit for riders currently using a mechanical drivetrain who want to convert to a new drivetrain type.

Converting to

SRAM AXS Wireless

Bike Model

Secan 3.0 or Faran 3.0


Clear

£15.00

1

Add to basket

MECHANICAL TO SRAM FULL MOUNT AXS 13-SPEED

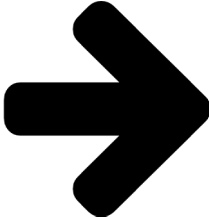

MECHANICAL TO SRAM FULL MOUNT AXS 13-SPEED - STRAEL 4.0

The kit contains the following:

- 1 x Mk III Full mount insert (inc. threaded stainless plate).
- 2 x T30 M6x12mm bolt - to install Full Mount Insert.
- 1 x Rear axle 171.5mm for Full Mount - Threads directly into SRAM Full Mount Derailleur.
- 1 x 8mm nylon spacer & 1 x 8mm brass spacer - for installing fender/rack to disc side dropout.
- 1 x 10mm nylon spacer & 1 x 10mm brass spacer - for installing fender/rack to drive side dropout.
- 1 x MK3 BB Guide Di2/AXS/EPS - Road
- 1 x T25 M5x6mm bolt + M5 reduced diameter washer - to install BB Guide.
- 1 x Mk III CNC Downtube guide - 1 way
- 1 x M5x14mm bolt + MK5 reduced diameter washer - to install downtube guide.



PURCHASE THIS KIT

Price: £70 -UK, £60 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout Mechanical Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT MECHANICAL DRIVETRAIN CONVERSION KITS

£15.00 - £70.00

A conversion kit for riders currently using a mechanical drivetrain who want to convert to a new drivetrain type.

Converting to

SRAM T-Type AXS

Bike Model

Strael 4.0

Clear

£70.00

1 **Add to basket**

MECHANICAL TO SRAM FULL MOUNT AXS 13-SPEED - SECAN 3.0 & FARAN 3.0

The kit contains the following:

- 1 x Mk III Full mount insert (inc. threaded stainless plate).
- 2 x T30 M6x12mm bolt - to install Full Mount Insert.
- 1 x Rear axle 171.5mm for Full Mount - Threads directly into SRAM Full Mount Derailleur.
- 1 x 8mm nylon spacer & 1 x 8mm brass spacer - for installing fender/rack to disc side dropout.
- 1 x 10mm nylon spacer & 1 x 10mm brass spacer - for installing fender/rack to drive side dropout.
- 1 x MK3 BB Guide Di2/AXS/EPS - Gravel
- 1 x T25 M5x6mm bolt + M5 reduced diameter washer - to install BB Guide.
- 1 x Mk III CNC Downtube guide - 1 way
- 1 x M5x14mm bolt + MK5 reduced diameter washer - to install downtube guide.



PURCHASE THIS KIT

Price: £70 -UK, £60 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout Mechanical Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT MECHANICAL DRIVETRAIN CONVERSION KITS

£15.00 - £70.00

A conversion kit for riders currently using a mechanical drivetrain who want to convert to a new drivetrain type.

Converting to

SRAM T-Type AXS

Bike Model

Secan 3.0 or Faran 3.0

Clear

£70.00

1

Add to basket

WIRELESS CONVERSION KITS

**CONVERTING SHIMANO DI2 12-SPEED &
SRAM AXS 12-SPEED GEARING TO:
MECHANICAL 1X
MECHANICAL 2X
SRAM FULL MOUNT AXS 13-SPEED**

NOTE: EXCEPT FOR SRAM FULL MOUNT AXS 13-SPEED KITS, THESE KITS DO NOT INCLUDE A HANGER. IF A DIFFERENT HANGER IS REQUIRED, THE RELEVANT LINKS ARE BELOW.

Hanger compatability is listed earlier in the document.





Purchase a Standard Hanger Insert [here](#)



Purchase a Direct Mount Insert [here](#)

SHIMANO DI2 12-SPEED & SRAM AXS 12-SPEED TO MECHANICAL

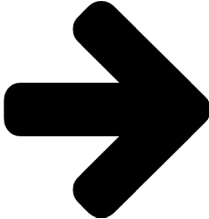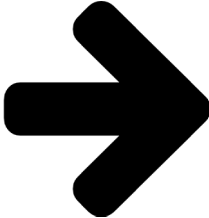

SHIMANO DI2 12-SPEED & SRAM AXS 12-SPEED TO MECHANICAL 2X - STRAEL 4.0

The kit contains the following:

- 1 x Mk III cable stop washer plate.
- 1 x Mk III CNC cable stop
- 1 x T30 M6x11mm bolt & 1 x T30 M6x14mm bolt - to install washer plate & cable stop.
- 1 x MK3 BB Guide Mechanical - Road (inc. nylon sleeve for front derailleur)
- 1 x T25 M5x6mm bolt + M5 reduced diameter washer - to install BB Guide.
- 1 x Mk III Main Cable Guide Mechanical 2x
- 1 x T25 M5x12mm bolt with integrated washer - to install main cable guide.
- 1 x Grommet Closed 6mm - for seat tube Di2 hole.
- 1 x Grommet Closed 7.5mm - for chainstay Di2 hole.



PURCHASE THIS KIT

Price: £30 -UK, £25 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout Wireless Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT WIRELESS DRIVETRAIN CONVERSION KITS

£30.00 - £60.00

A conversion kit for riders currently using a wireless drivetrain who want to convert to a new drivetrain type.

Converting to

Mechanical 2x

Bike Model

Strael 4.0

Clear

£30.00

1 **Add to basket**

SHIMANO DI2 12-SPEED & SRAM AXS 12-SPEED TO MECHANICAL 2X - SECAN 3.0 & FARAN 3.0

The kit contains the following:

- 1 x Mk III cable stop washer plate.
- 1 x Mk III CNC cable stop
- 1 x T30 M6x11mm bolt & 1 x T30 M6x14mm bolt - to install washer plate & cable stop.
- 1 x MK3 BB Guide Mechanical - Gravel (inc. nylon sleeve for front derailleur)
- 1 x T25 M5x6mm bolt + M5 reduced diameter washer - to install BB Guide.
- 1 x Mk III Main Cable Guide Mechanical 2x
- 1 x T25 M5x12mm bolt with integrated washer - to install main cable guide.
- 1 x Grommet Closed 6mm - for seat tube Di2 hole.
- 1 x Grommet Closed 7.5mm - for chainstay Di2 hole.



PURCHASE THIS KIT

Price: £30 -UK, £25 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout Wireless Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT WIRELESS DRIVETRAIN CONVERSION KITS

£30.00 - £60.00

A conversion kit for riders currently using a wireless drivetrain who want to convert to a new drivetrain type.

Converting to

Mechanical 2x

Bike Model

Secan 3.0 or Faran 3.0

Clear

£30.00

1 **Add to basket**

SHIMANO DI2 12-SPEED & SRAM AXS 12-SPEED TO MECHANICAL 1X - STRAEL 4.0

The kit contains the following:

- 1 x Mk III cable stop washer plate.
- 1 x Mk III CNC cable stop
- 1 x T30 M6x11mm bolt & 1 x T30 M6x14mm bolt - to install washer plate & cable stop.
- 1 x MK3 BB Guide Mechanical - Road (inc. nylon sleeve for front derailleur - put to one side for future use)
- 1 x T25 M5x6mm bolt + M5 reduced diameter washer - to install BB Guide.
- 1 x Mk III Main Cable Guide Mechanical 1x
- 1 x T25 M5x12mm bolt with integrated washer - to install main cable guide.
- 1 x Grommet Closed 6mm - for seat tube Di2 hole.
- 1 x Grommet Closed 7.5mm - for chainstay Di2 hole.



PURCHASE THIS KIT

Price: £30 -UK, £25 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout Wireless Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT WIRELESS DRIVETRAIN CONVERSION KITS

£30.00 - £60.00

A conversion kit for riders currently using a wireless drivetrain who want to convert to a new drivetrain type.

Converting to

Mechanical 1x

Bike Model

Strael 4.0

Clear

£30.00

1

Add to basket

SHIMANO DI2 12-SPEED & SRAM AXS 12-SPEED TO MECHANICAL 1X - SECAN 3.0 & FARAN 3.0

The kit contains the following:

- 1 x Mk III cable stop washer plate.
- 1 x Mk III CNC cable stop
- 1 x T30 M6x11mm bolt & 1 x T30 M6x14mm bolt - to install washer plate & cable stop.
- 1 x MK3 BB Guide Mechanical - Gravel (inc. nylon sleeve for front derailleur - put to one side for future use)
- 1 x T25 M5x6mm bolt + M5 reduced diameter washer - to install BB Guide.
- 1 x Mk III Main Cable Guide Mechanical 1x
- 1 x T25 M5x12mm bolt with integrated washer - to install main cable guide.
- 1 x Grommet Closed 6mm - for seat tube Di2 hole.
- 1 x Grommet Closed 7.5mm - for chainstay Di2 hole.



NOTE: If, as part of your 1x mechanical conversion you also want to install a dropper post, you will need to purchase a set of [2-way CNC hose guides](#).

PURCHASE THIS KIT

Price: £30 -UK, £25 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout Wireless Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT WIRELESS DRIVETRAIN CONVERSION KITS

£30.00 - £60.00

A conversion kit for riders currently using a wireless drivetrain who want to convert to a new drivetrain type.

Converting to

Mechanical 1x

Bike Model


Secan 3.0 or Faran 3.0

Clear

£30.00

1 **Add to basket**

SHIMANO DI2 12-SPEED & SRAM AXS 12-SPEED TO SRAM FULL MOUNT AXS 13-SPEED

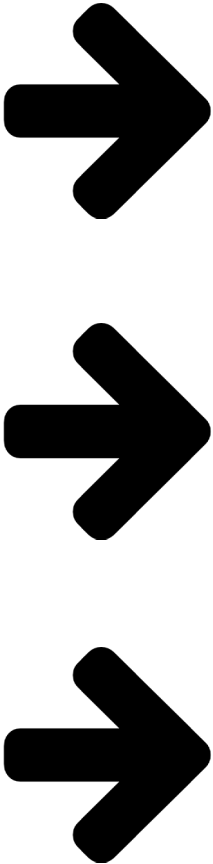

SHIMANO DI2 12-SPEED & SRAM AXS 12-SPEED TO SRAM FULL MOUNT AXS 13-SPEED

- STRAEL 4.0

The kit contains the following:

- 1 x Mk III Full mount insert (inc. threaded stainless plate).
- 2 x T30 M6x12mm bolt - to install Full Mount Insert.
- 1 x Rear axle 171.5mm for Full Mount - Threads directly into SRAM Full Mount Derailleur.
- 1 x 8mm nylon spacer & 1 x 8mm brass spacer - for installing fender/rack to disc side dropout.
- 1 x 10mm nylon spacer & 1 x 10mm brass spacer - for installing fender/rack to drive side dropout.
- 1 x Grommet Closed 6mm - for seat tube Di2 hole.
- 1 x Grommet Closed 7.5mm - for chainstay Di2 hole.



PURCHASE THIS KIT

Price: £60 -UK, £50 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout Wireless Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT WIRELESS DRIVETRAIN CONVERSION KITS

£30.00 - £60.00

A conversion kit for riders currently using a wireless drivetrain who want to convert to a new drivetrain type.

Converting to

SRAM T-Type AXS

Bike Model

Strael 4.0

Clear

£60.00

1

SHIMANO DI2 12-SPEED & SRAM AXS 12-SPEED TO SRAM FULL MOUNT AXS 13-SPEED

- SECAN 3.0 & FARAN 3.0

The kit contains the following:

- 1 x Mk III Full mount insert (inc. threaded stainless plate).
- 2 x T30 M6x12mm bolt - to install Full Mount Insert.
- 1 x Rear axle 171.5mm for Full Mount - Threads directly into SRAM Full Mount Derailleur.
- 1 x 8mm nylon spacer & 1 x 8mm brass spacer - for installing fender/rack to disc side dropout.
- 1 x 10mm nylon spacer & 1 x 10mm brass spacer - for installing fender/rack to drive side dropout.
- 1 x Grommet Closed 6mm - for seat tube Di2 hole.
- 1 x Grommet Closed 7.5mm - for chainstay Di2 hole.



PURCHASE THIS KIT

Price: £60 -UK, £50 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout Wireless Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT WIRELESS DRIVETRAIN CONVERSION KITS

£30.00 - £60.00

A conversion kit for riders currently using a wireless drivetrain who want to convert to a new drivetrain type.

Converting to

SRAM T-Type AXS

Bike Model

Secan 3.0 or Faran 3.0

Clear

£60.00

1

Add to basket

SRAM FULL MOUNT AXS CONVERSION KITS

**CONVERTING SRAM FULL MOUNT AXS 13-SPEED TO:
MECHANICAL 1X
MECHANICAL 2X
SHIMANO DI2 12-SPEED
SRAM AXS 12-SPEED**

NOTE: FOR ALL SRAM FULL MOUNT AXS 13-SPEED CONVERSIONS YOU WILL REQUIRE A NEW HANGER AS WELL AS THE RESPECTIVE CONVERSION KITS.

Hanger compatability is listed earlier in the document.





Purchase a Standard Hanger Insert [here](#)



Purchase a Direct Mount Insert [here](#)

SRAM FULL MOUNT AXS 13-SPEED TO MECHANICAL

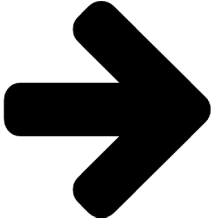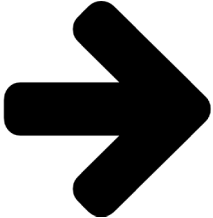

SRAM FULL MOUNT AXS 13-SPEED TO MECHANICAL 2X - STRAEL 4.0

The kit contains the following:

- 1 x Mk III cable stop washer plate.
- 1 x Mk III CNC cable stop
- 1 x T30 M6x11mm bolt & 1 x T30 M6x14mm bolt - to install washer plate & cable stop.
- 1 x MK3 BB Guide Mechanical - Road (inc. nylon sleeve for front derailleur)
- 1 x T25 M5x6mm bolt + M5 reduced diameter washer - to install BB Guide.
- 1 x Mk III Main Cable Guide Mechanical 2x
- 1 x T25 M5x12mm bolt with integrated washer - to install main cable guide.
- 1 x Rear axle 168mm - for standard hanger and Direct Mount



PURCHASE THIS KIT

Price: £50 -UK, £42 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout T-Type AXS Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT T-TYPE AXS DRIVETRAIN CONVERSION KITS

£25.00 - £50.00

A conversion kit for riders currently using a T-Type AXS drivetrain who want to convert to a new drivetrain type.

Converting to

Mechanical 2x

Bike Model

Strael 4.0

Clear

£50.00

1

Add to basket

SRAM FULL MOUNT AXS 13-SPEED TO MECHANICAL 2X - SECAN 3.0 & FARAN 3.0

The kit contains the following:

- 1 x Mk III cable stop washer plate.
- 1 x Mk III CNC cable stop
- 1 x T30 M6x11mm bolt & 1 x T30 M6x14mm bolt - to install washer plate & cable stop.
- 1 x MK3 BB Guide Mechanical - Gravel (inc. nylon sleeve for front derailleur)
- 1 x T25 M5x6mm bolt + M5 reduced diameter washer - to install BB Guide.
- 1 x Mk III Main Cable Guide Mechanical 2x
- 1 x T25 M5x12mm bolt with integrated washer - to install main cable guide.
- 1 x Rear axle 168mm - for standard hanger and Direct Mount



PURCHASE THIS KIT

Price: £50 -UK, £42 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout T-Type AXS Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT T-TYPE AXS DRIVETRAIN CONVERSION KITS

£25.00 - £50.00

A conversion kit for riders currently using a T-Type AXS drivetrain who want to convert to a new drivetrain type.

Converting to

Mechanical 2x

Bike Model

Secan 3.0 or Faran 3.0

Clear

£50.00

1

Add to basket

SRAM FULL MOUNT AXS 13-SPEED TO MECHANICAL 1X - STRAEL 4.0

The kit contains the following:

- 1 x Mk III cable stop washer plate.
- 1 x Mk III CNC cable stop
- 1 x T30 M6x11mm bolt & 1 x T30 M6x14mm bolt - to install washer plate & cable stop.
- 1 x MK3 BB Guide Mechanical - Road (inc. nylon sleeve for front derailleur - put to one side for future use)
- 1 x T25 M5x6mm bolt + M5 reduced diameter washer - to install BB Guide.
- 1 x Mk III Main Cable Guide Mechanical 1x
- 1 x T25 M5x12mm bolt with integrated washer - to install main cable guide.
- 1 x Rear axle 168mm - for standard hanger and Direct Mount



PURCHASE THIS KIT

Price: £50 -UK, £42 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout T-Type AXS Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT T-TYPE AXS DRIVETRAIN CONVERSION KITS

£25.00 - £50.00

A conversion kit for riders currently using a T-Type AXS drivetrain who want to convert to a new drivetrain type.

Converting to

Mechanical 1x

Bike Model

Strael 4.0

Clear

£50.00

1

Add to basket

SRAM FULL MOUNT AXS 13-SPEED TO MECHANICAL 1X - SECAN 3.0 & FARAN 3.0

The kit contains the following:

- 1 x Mk III cable stop washer plate.
- 1 x Mk III CNC cable stop
- 1 x T30 M6x11mm bolt & 1 x T30 M6x14mm bolt - to install washer plate & cable stop.
- 1 x MK3 BB Guide Mechanical - Road (inc. nylon sleeve for front derailleur - put to one side for future use)
- 1 x T25 M5x6mm bolt + M5 reduced diameter washer - to install BB Guide.
- 1 x Mk III Main Cable Guide Mechanical 1x
- 1 x T25 M5x12mm bolt with integrated washer - to install main cable guide.
- 1 x Rear axle 168mm - for standard hanger and Direct Mount.



NOTE: If, as part of your 1x mechanical conversion you also want to install a dropper post, you will need to purchase a set of [2-way CNC hose guides](#).

PURCHASE THIS KIT

Price: £50 -UK, £42 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout T-Type AXS Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT T-TYPE AXS DRIVETRAIN CONVERSION KITS

£25.00 - £50.00

A conversion kit for riders currently using a T-Type AXS drivetrain who want to convert to a new drivetrain type.

Converting to
Mechanical 1x

Bike Model
Secan 3.0 or Faran 3.0

Clear

£50.00

1 **Add to basket**

SRAM FULL MOUNT AXS 13-SPEED TO SRAM AXS 12-SPEED



SRAM FULL MOUNT AXS 13-SPEED TO SRAM AXS 12-SPEED - STRAEL 4.0

The kit contains the following:

- 1 x Mk III washer plate - Di2/AXS/EPS
- 2 x T30 M6x11mm bolts - to install washer plate.
- 1 x Rear axle 168mm - for standard hanger and Direct Mount



PURCHASE THIS KIT

Price: £25 -UK, £21 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout T-Type AXS Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT T-TYPE AXS DRIVETRAIN CONVERSION KITS

£25.00 - £50.00

A conversion kit for riders currently using a T-Type AXS drivetrain who want to convert to a new drivetrain type.

Converting to

SRAM Wireless (eg Force AXS 2x) ▼

Bike Model

Strael 4.0 ▼

Clear

£25.00

1

Add to basket

SRAM FULL MOUNT AXS 13-SPEED TO SRAM AXS 12-SPEED - SECAN 3.0, FARAN 3.0

The kit contains the following:

- 1 x Mk III washer plate - Di2/AXS/EPS
- 2 x T30 M6x11mm bolts - to install washer plate.
- 1 x Rear axle 168mm - for standard hanger and Direct Mount



PURCHASE THIS KIT

Price: £25 -UK, £21 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout T-Type AXS Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT T-TYPE AXS DRIVETRAIN CONVERSION KITS

£25.00 - £50.00

A conversion kit for riders currently using a T-Type AXS drivetrain who want to convert to a new drivetrain type.

Converting to

SRAM Wireless (eg Force AXS 2x) ▼

Bike Model

Secan 3.0 or Faran 3.0 ▼


Clear

£25.00

1

Add to basket

SRAM FULL MOUNT AXS 13-SPEED TO SHIMANO DI2 12-SPEED

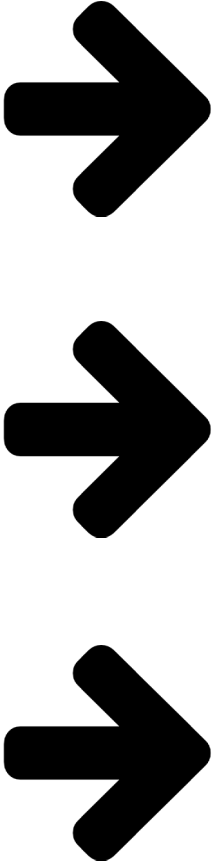

SRAM FULL MOUNT AXS 13-SPEED TO SHIMANO DI2 12-SPEED - STRAEL 4.0

The kit contains the following:

- 1 x Mk III washer plate - Di2/AXS/EPS
- 2 x T30 M6x11mm bolts - to install washer plate.
- 1 x Rear axle 168mm - for standard hanger and Direct Mount
- Shimano Di2 Grommet EW-SD300 6mm - for seat tube Di2 hole / front derailleur wire.
- Shimano Di2 Grommet EW-SD300 7x8mm - for chainstay Di2 hole / rear derailleur wire.



PURCHASE THIS KIT

Price: £25 -UK, £21 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout T-Type AXS Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT T-TYPE AXS DRIVETRAIN CONVERSION KITS

£25.00 - £50.00

A conversion kit for riders currently using a T-Type AXS drivetrain who want to convert to a new drivetrain type.

Converting to

Shimano Di2 Wireless

Bike Model

Strael 4.0

[Clear](#)

£25.00

1

Add to basket

SRAM FULL MOUNT AXS 13-SPEED TO SHIMANO 12-SPEED - SECAN 3.0, FARAN 3.0

The kit contains the following:

- 1 x Mk III washer plate - Di2/AXS/EPS
- 2 x T30 M6x11mm bolts - to install washer plate.
- 1 x Rear axle 168mm - for standard hanger and Direct Mount
- Shimano Di2 Grommet EW-SD300 6mm - for seat tube Di2 hole / front derailleur wire.
- Shimano Di2 Grommet EW-SD300 7x8mm - for chainstay Di2 hole / rear derailleur wire.



PURCHASE THIS KIT

Price: £25 -UK, £21 (exc taxes & duty) - International

Follow the link [here](#) and make the selections below:

Home / Small Parts / Conversion Kits / MK3 Dropout T-Type AXS Drivetrain Conversion Kits

STRAEL 4.0 SECAN 3.0 FARAN 3.0

MK3 DROPOUT T-TYPE AXS DRIVETRAIN CONVERSION KITS

£25.00 - £50.00

A conversion kit for riders currently using a T-Type AXS drivetrain who want to convert to a new drivetrain type.

Converting to

Shimano Di2 Wireless

Bike Model


Secan 3.0 or Faran 3.0

Clear

£25.00

1

Add to basket

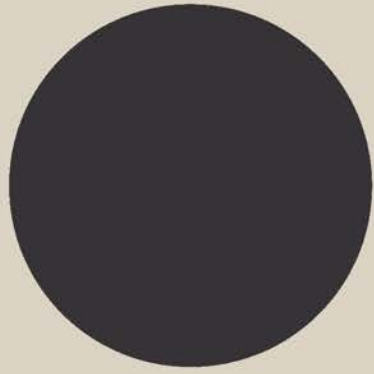

FIT FUNCTION FORM

$f \times b$ MK III